

Installation Procedure

Gasokol Topsol


Roof integrated panel



Step 1
Lay tiles/slates up to the bottom edge of the proposed panel location

Step 2
Call Sarum Solar and arrange to place & fix the solar

Step 3
Lay tiles/slates up to top edge of panel.
Slate roof only: use provided soakers, lay box-shaped soaker flush with the top edge of the

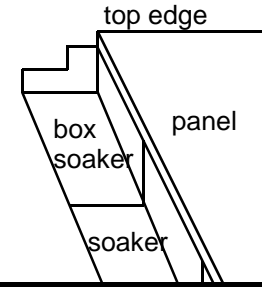

Step 4
Call Sarum Solar and arrange the installation of the top flashing. Alternatively install the flashing yourself - ask Sarum Solar for the instructions and fixings

Step 5
Finish roof

